


RADIATOR

REMOVAL

Remove the seat and fuel tank (Page 3-3).
Drain the radiator coolant (Page 9-3).
Remove the radiator joint hose and reserve tank tube.

Loosen the radiator hose bands and remove the following hoses:

- radiator-to-cylinder.
- radiator-to-water pump.
- left radiator-to-right radiator.

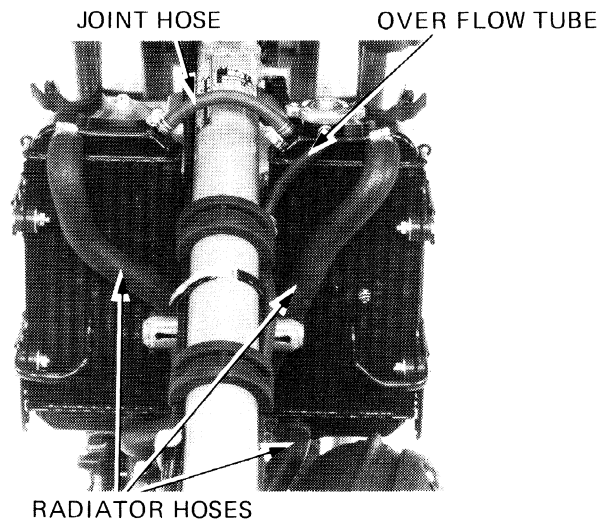


Remove the radiator mount bracket attaching bolts and remove the radiator with the bracket.

INSTALLATION

Installation is essentially the reverse order of removal.
Fill with the recommended coolant (Page 9-3).

After installation, check the radiator and hoses for leaks.

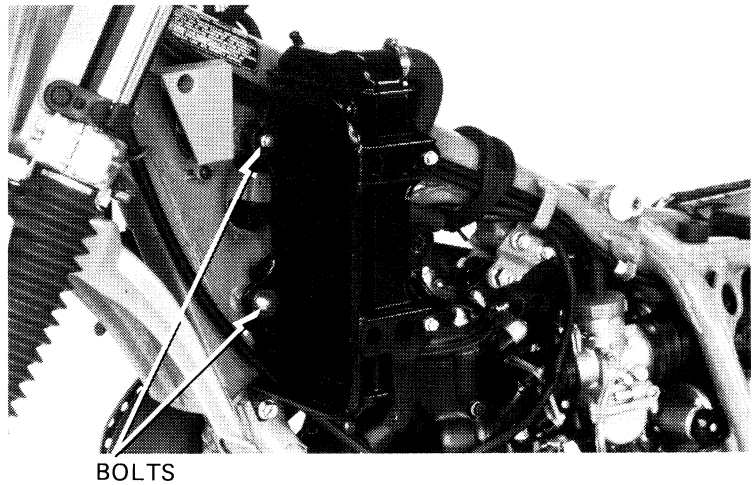

WATER PUMP

MECHANICAL SEAL INSPECTION

Inspect the telltale hole for signs of coolant leakage.
Replace the mechanical seal if there is leaking.

