


COOLING SYSTEM

INSPECTION

Check the water pump shaft for any damage.
Check the water pump shaft bearing in the right crankcase cover for excessive play or damage.

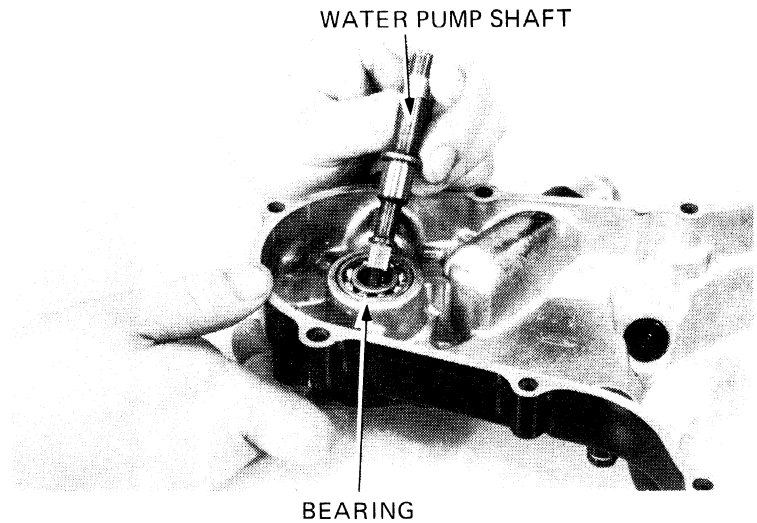

MECHANICAL SEAL/BEARING REPLACEMENT

Remove the bearing with a bearing remover.
Remove the oil seal, then drive out the mechanical seal.



Drive a new mechanical seal carefully into the right crankcase cover.

CAUTION

Be careful not to damage the cover when driving the mechanical seal, into the cover.

NOTE

Instructions for usage of the Mechanical Seal Installer are in the Special Tool catalog (U.S.A. only).

Install a new oil seal and drive a new bearing in the right crankcase cover.

