


## FRONT WHEEL/SUSPENSION/STEERING

### FRONT WHEEL

#### FRONT WHEEL REMOVAL

Raise the front wheel off the ground by placing a block or safety stand under the skid plate.  
Remove the front brake hose clamp from the fork slider.  
Remove the front brake caliper mount bolts.


BRAKE HOSE CLAMP

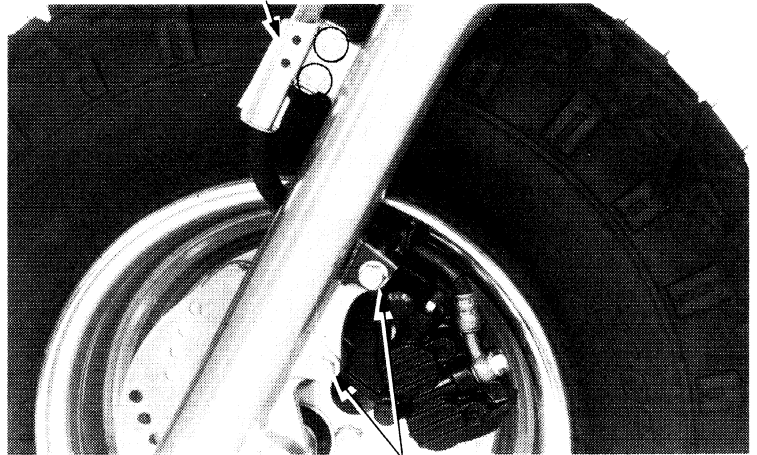

CALIPER MOUNT BOLTS

Remove the front wheel nuts and loosen the axle holder nuts.

WHEEL NUTS

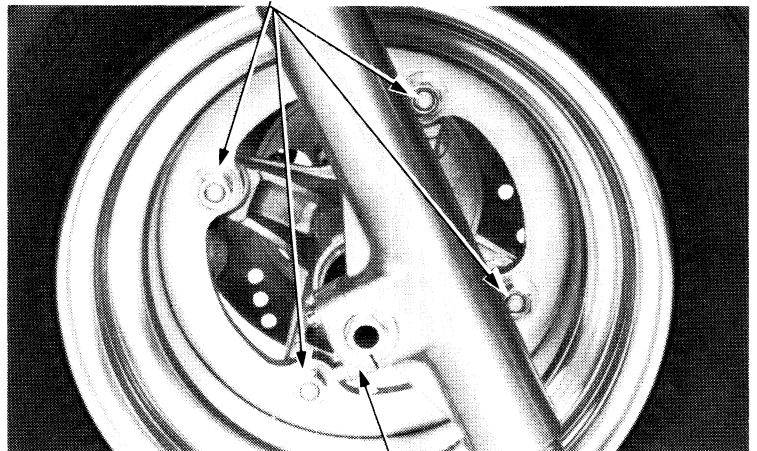

AXLE HOLDER

Loosen the axle and pull it out.  
Remove the front wheel being careful not to damage the brake pads.

#### NOTES

- Place a small wooden wedge between the brake pads to keep them from being forced out at the caliper.
- Do not loosen the brake hose. Whenever the brake hose is loosened, it is necessary to bleed air from the brake. Refer to page 13-4 for bleeding procedures.

AXLE

