


FRONT AXLE INSPECTION

Set the axle in V-blocks, rotate and measure the runout.

SERVICE LIMIT: 0.5 mm (0.02 in)

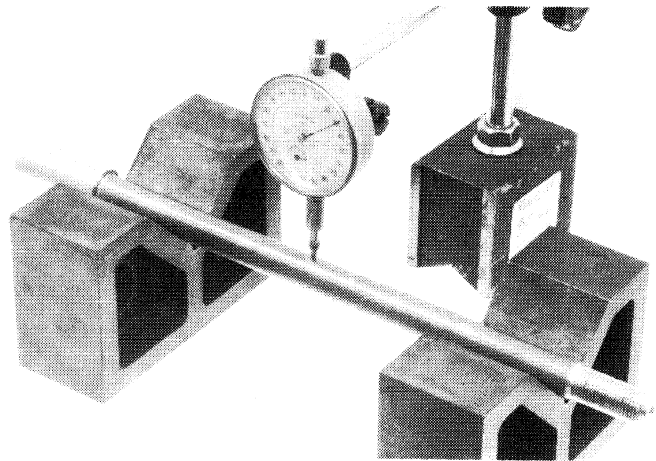


WHEEL BEARING INSPECTION

Turn the inner race of each bearing with your finger. The bearings should turn smoothly and quietly. Also check that the bearing outer race fits tightly in the hub.

Remove and discard the bearings if the races do not turn smoothly, quietly, or if they fit loosely in the hub.


NOTE:

Replace hub bearings in pairs.

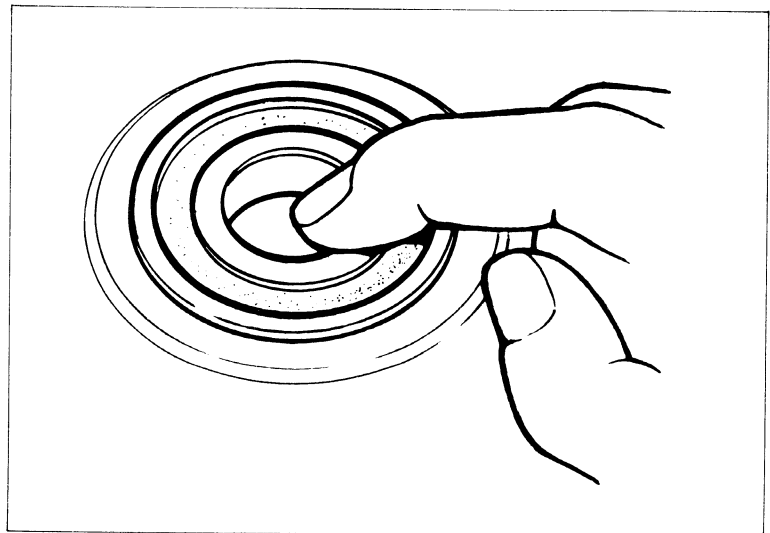

WHEEL BEARING REPLACEMENT

Remove the front brake disc from the hub.
Remove the dust seal.

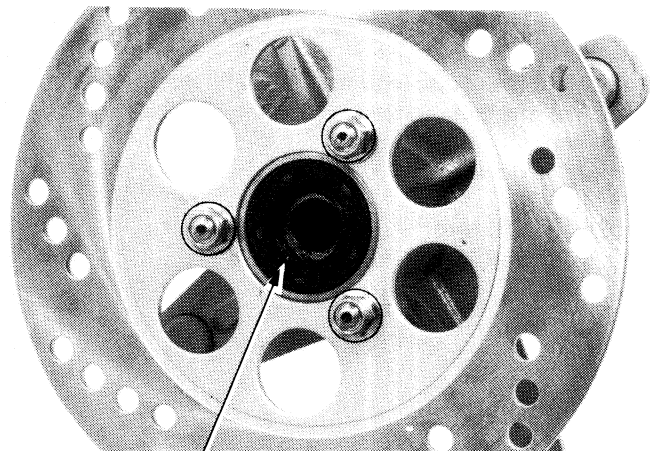

DUST SEAL