


## FRONT WHEEL/SUSPENSION/STEERING

Remove the wheel bearings with bearing remover.

### NOTE

Never reinstall old bearings; once the bearings have been removed, they must be replaced with new ones.

BEARING REMOVER SHAFT  
07746-0050100 OR COMMERCIALY AVAILABLE IN U.S.A.

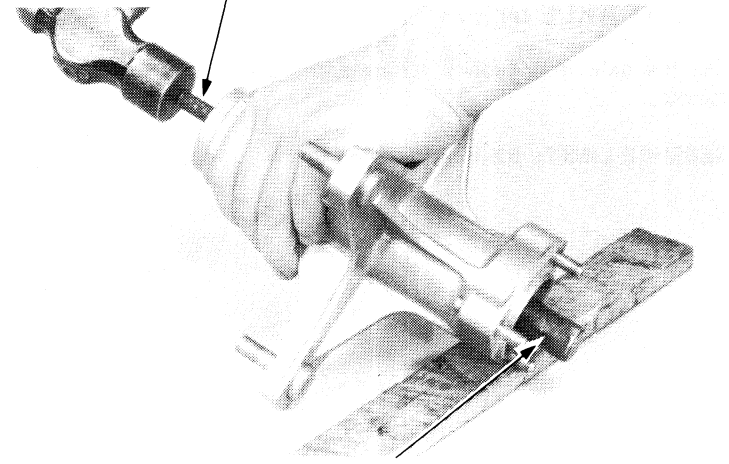


BEARING REMOVER HEAD, 15 mm  
07746-0050400 OR COMMERCIALY AVAILABLE IN U.S.A.

### NOTE

Replace hub bearings in pairs.

Pack new bearings with grease and install them into the hub with the special tools.

DRIVER 07749-0010000

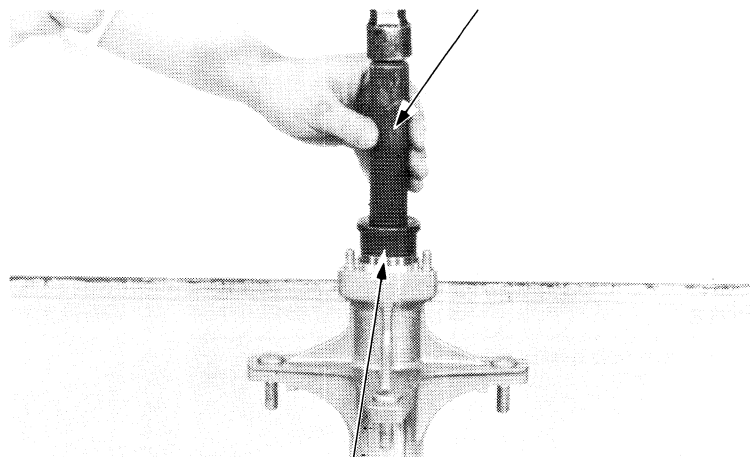

ATTACHMENT, 42 x 47 mm 07746-0010300  
PILOT, 15 mm 07746-0040300

Apply grease to the dust seal lips and install the seals into the hub.

Install the front brake disc with the "DRIVE" mark facing toward the hub (arrow points the normal rotating direction).

Tighten the disc mount nuts.

**TORQUE: 25-30 N·m  
(2.5-3.0 kg·m, 18-22 ft·lb)**

"DRIVE" MARK

