

FRONT WHEEL/SUSPENSION/STEERING


'85:

Remove the spring seat and fork springs.

AFTER '85:

Remove the fork spring.

Drain the fork oil by pumping the fork up and down several times.

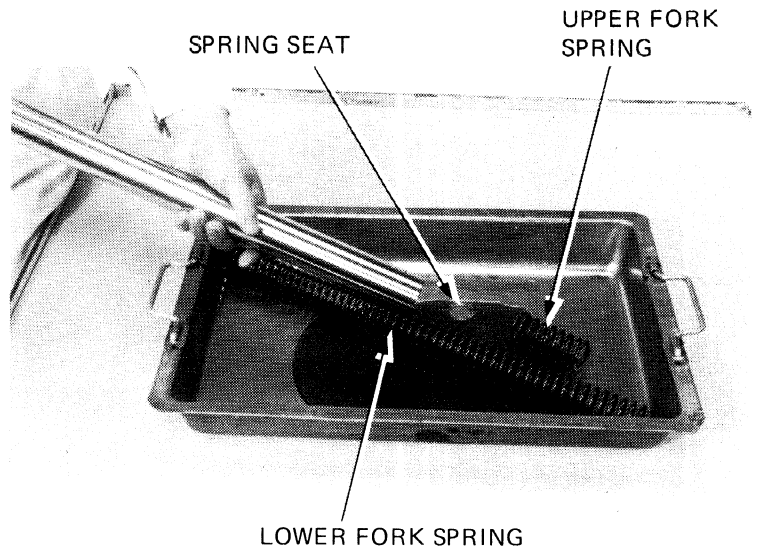

Hold the fork slider in a vise with soft jaws or shop towel.

Remove the socket bolt with a hex wrench.

CAUTION


Do not overtighten the slider in the vise. Overtightening will damage the slider.

NOTE

Temporarily install the springs and fork tube cap if difficulty is encountered in removing the socket bolt.

Remove the fork piston and rebound spring.

HEX. WRENCH, 6mm
07917-3230000 or equivalent

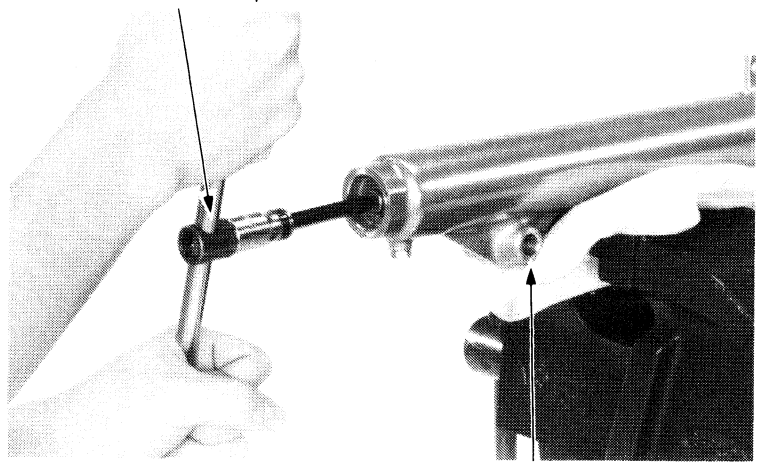

SHOP TOWELS
or SOFT JAWS

Remove the dust seal.

