



FRONT WHEEL/SUSPENSION/STEERING

Remove the snap ring.

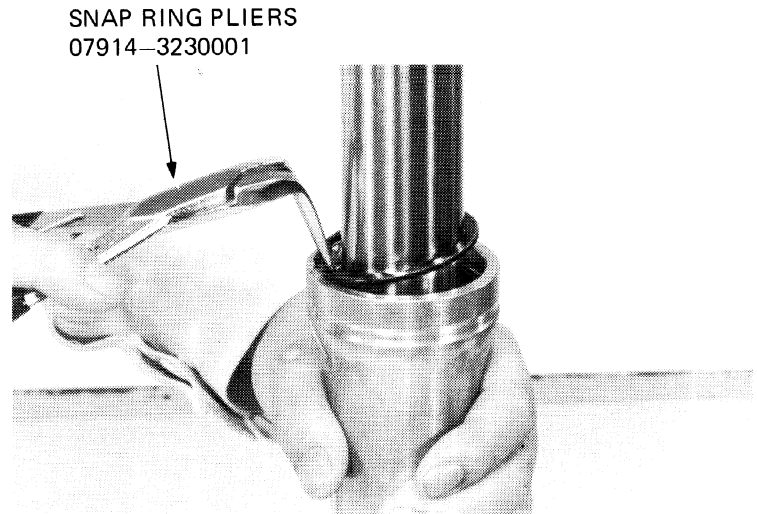

Pull the fork tube out until resistance from the slider bushing is felt. Then move it in and out, tapping the bushing lightly until the fork tube separates from the slider. The slider bushing will be forced out by the fork tube bushing. Remove the oil lock piece.

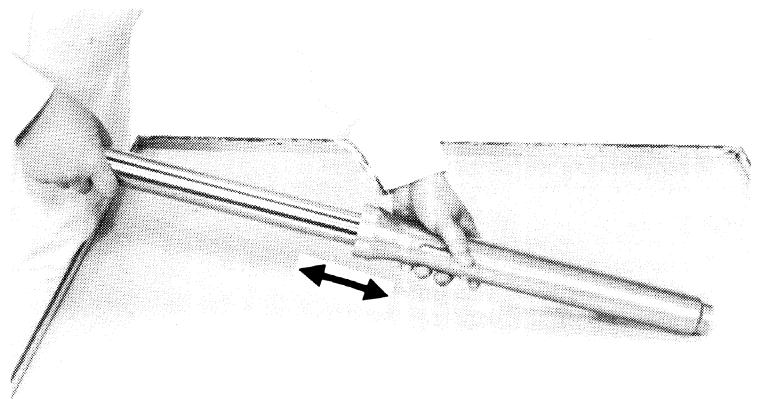

Remove the oil seal, back-up ring and slider bushing from the fork tube.

NOTE

Do not remove the fork tube bushings unless it is necessary to replace it with new one.

