


FRONT WHEEL/SUSPENSION/STEERING

Install the snap ring and dust seal.

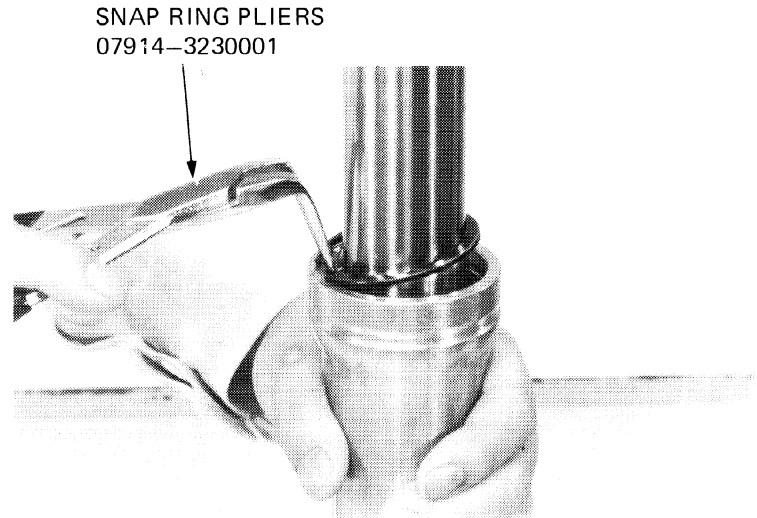

Fill the fork with ATF.

CAPACITY:


'85: 400 cc (13.56 oz)
AFTER '85: 465 cc (15.5 oz)

Pump the fork several times.

Compress the fork and measure the ATF level from the top of the tube after the level stabilizes.

SPECIFIED LEVEL:

'85: 186 mm (7.3 in)
AFTER '85: 113 mm (4.4 in)

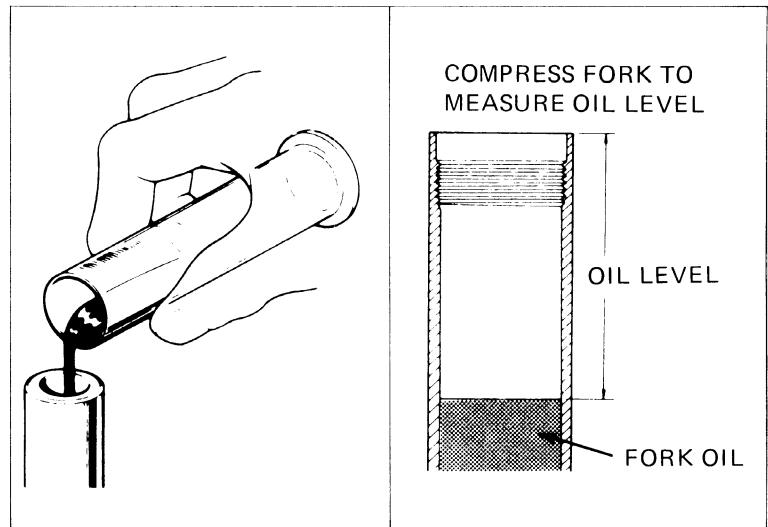

Wipe oil off the spring thoroughly using a clean cloth.

Install the lower fork spring with the taper end facing down.

Install the spring seat and upper fork spring on the lower fork spring.

