


## **STEERING STEM**


### **REMOVAL**

- Remove the following parts:
- Headlight case (Page 10-14).
  - Handlebar (Page 10-3).
  - Front wheel (Page 10-6).
  - Front fender.

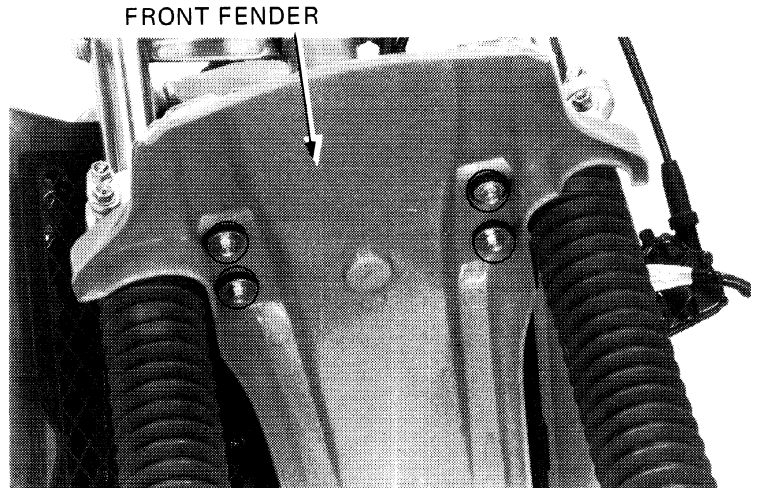

- Remove the steering stem nut and washer.  
Loosen the fork pinch bolts, and remove the front forks.  
Remove the fork bridge.

EXTENSION BAR 07716-0020500 OR EQUIVALENT  
AVAILABLE IN U.S.A.

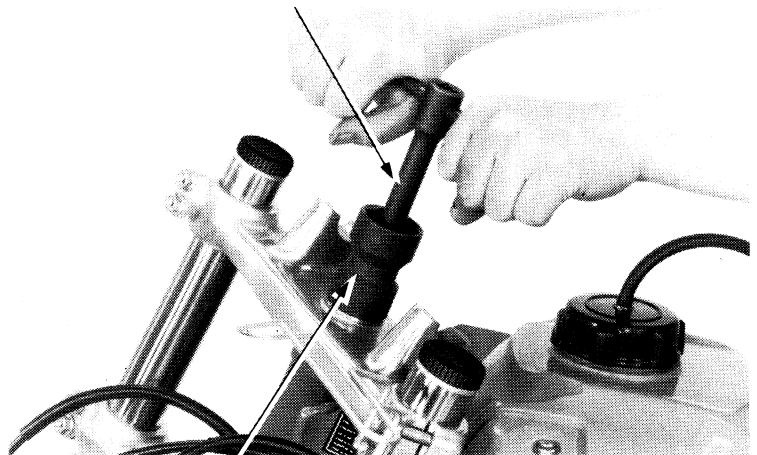

LOCK NUT WRENCH, 30 x 32 mm 07716-0020400  
OR EQUIVALENT AVAILABLE IN U.S.A.

- Remove the washer and dust seal.

