

## FRONT WHEEL/SUSPENSION/STEERING

Loosen the steering bearing adjustment nut, and remove the nut.


STEERING STEM SOCKET  
07916-3710100



ADJUSTMENT NUT

Remove the steering stem and upper bearing from the steering head pipe.

UPPER BEARING

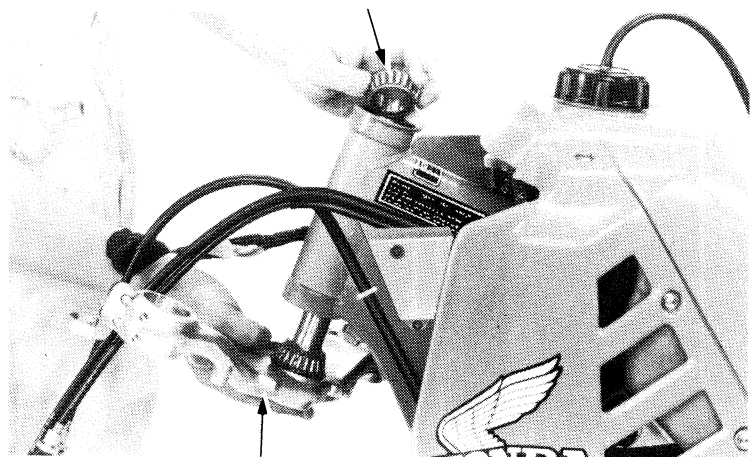

STEERING STEM

Check the steering head bearings and outer races for wear or damage.

### NOTE

Replace the taper roller bearing and outer race as a set.

