


FRONT WHEEL/SUSPENSION/STEERING

Drive out the upper and lower bearing outer races from the steering head pipe.

NOTES

- If the motorcycle has been involved in an accident, examine the area around the steering head pipe for cracks.
- When removing the steering head races, use the "B" side of the tool (07953-MJ1000A).

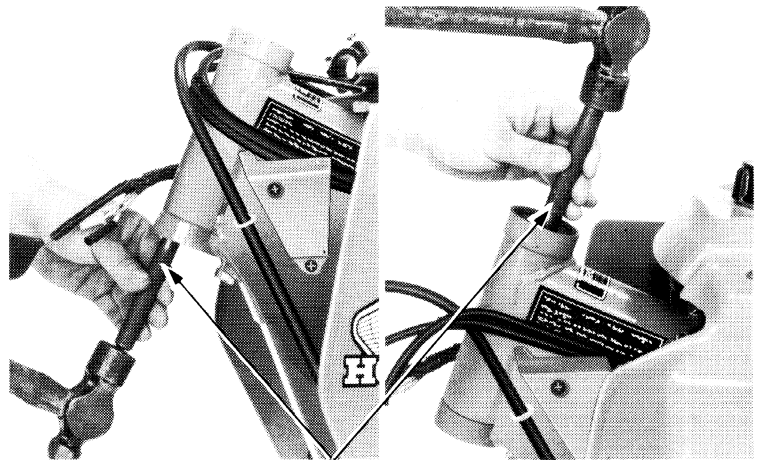

BALL RACE REMOVER 07953-KA50000 OR
RACE REMOVER ATTACHMENT 07935-MJ1000A
ATTACHMENT, 32 x 35 mm 07746-0010100
DRIVER 07949-3710001 OR 07949-3710000
DUST SEAL LOWER BEARING

Install the stem nut onto the stem to prevent the threads from being damaged when removing the lower bearing from the stem.
Remove the lower bearing with a chisel, being careful not to damage the stem.

