

Install the dust seal onto the steering stem and press a new lower bearing over the stem with a special tool.




STEERING STEM DRIVER AND ATTACHMENT  
07946-MB00000 or 07953-4300100  
ATTACHMENT GN-HT-54 (U.S.A. only)

DRIVER  
07749-0010000

ATTACHMENT, 42 x 47 mm  
07746-0010300

Drive new upper and lower bearing outer races into the steering head pipe.

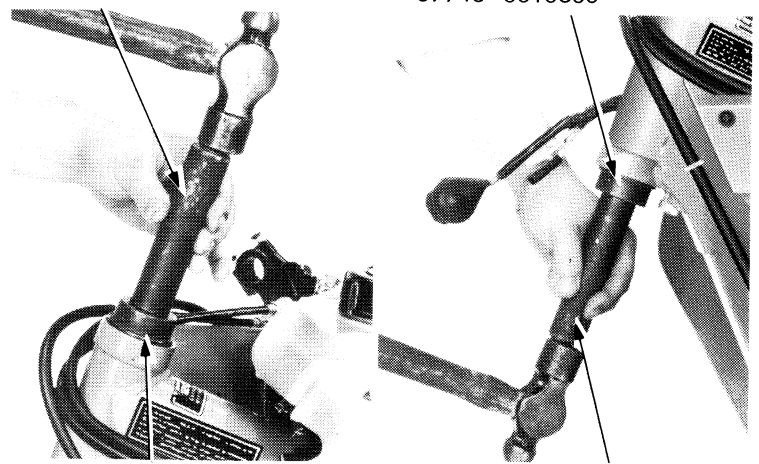

ATTACHMENT, 42 x 47 mm  
07746-0010300

DRIVER  
07749-0010000

### INSTALLATION

Apply grease to the bearings and outer races.  
Install the steering stem and upper bearing into the steering head pipe.

