

## **TROUBLESHOOTING**

### **Wheel wobble or vibration in vehicle**

- Bent rim
- Loose wheel bearings
- Faulty rear axle bearing holder
- Faulty tire
- Loose axle
- Worn or damaged swing arm pivot bearings