


## REAR WHEEL/DRIVE MECHANISM


Move the ends of the axle to back and forth, and up and down to check the wheel bearing play. If the play is excessive, replace the wheel bearings (Page 11-9).

Remove the swing arm lower guard by removing the four bolts.

Remove the four sprocket bolts and remove the driven sprocket from the sprocket hub.

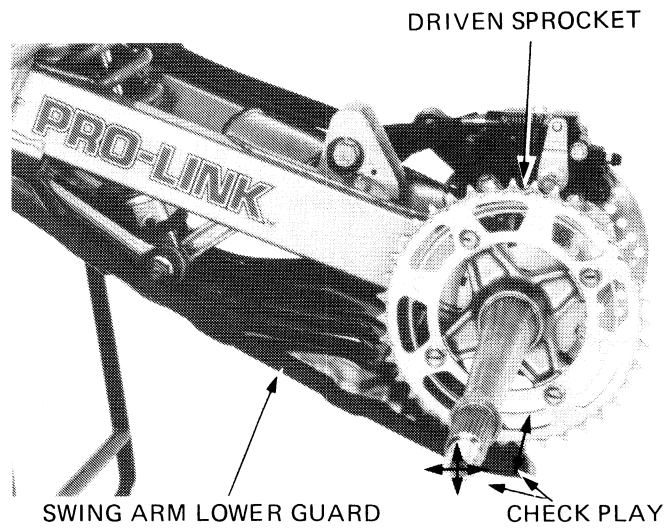

Remove the caliper bracket bolts and raise the caliper off the brake disc.

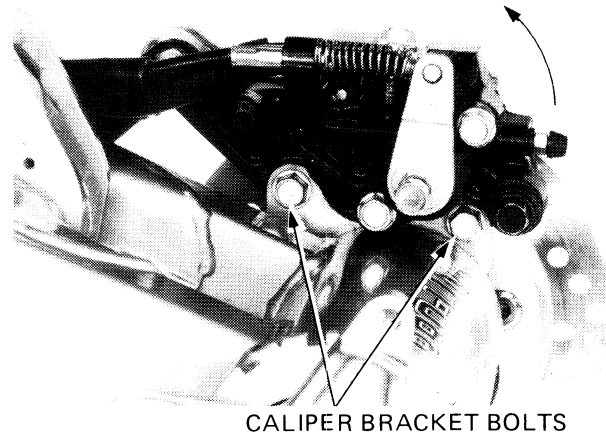

Loosen the rear axle inner lock nut while holding the outer lock nut.

### NOTE

The rear axle lock nuts have left-hand threads. 07916-HA20000 consists of 56 mm wrench (07916-HA20100) and handle (07916-9580500). If you have 41 mm wrench set (07916-9580300), the handle (07916-9580500) can be used from the set.

