


REAR SUSPENSION

Fill the reservoir with ATF.


NOTE

Make sure that there is no gas pressure in the reservoir.

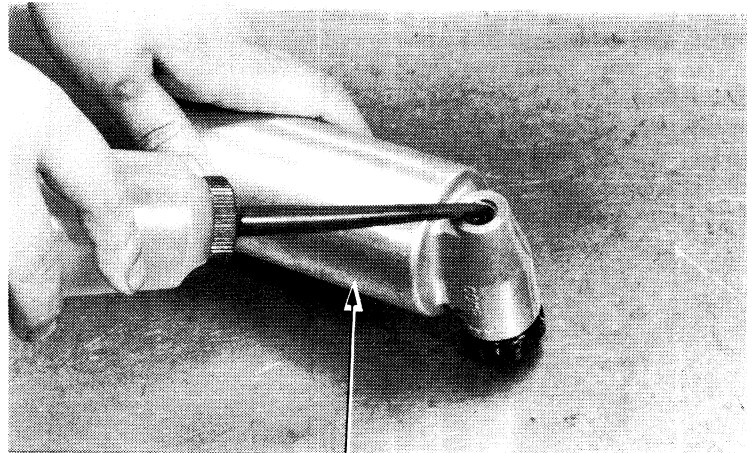

RESERVOIR

Fill the hose with ATF.

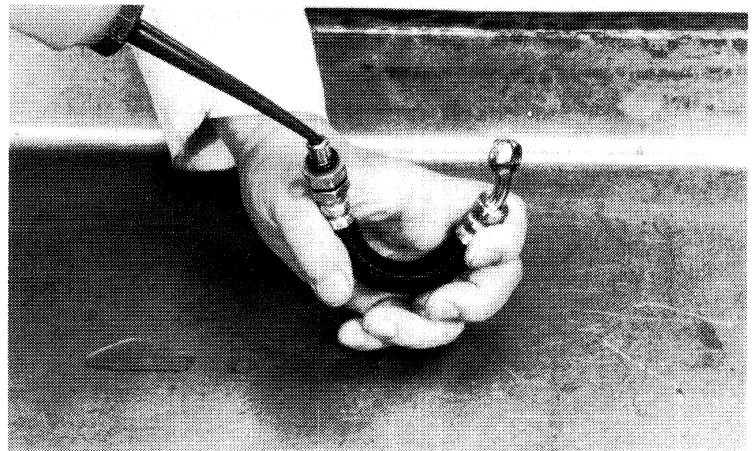

Connect the hose to the damper unit with two sealing washers and the bolt and tighten the oil hose bolt.

TORQUE: 28–32 N·m
(2.8–3.2 kg·m, 20–23 ft·lb)

Very slowly push the damper rod in until ATF begins to overflow from the hose.
Pull the damper rod out all the way and fill the hose with ATF.

