


Remove the shock link pivot bolt and shock link from the frame.


SHOCK LINK PIVOT BOLT

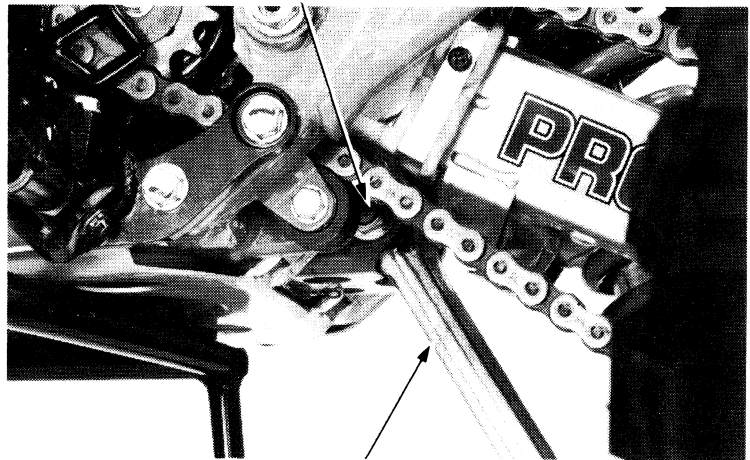

SHOCK LINK

INSPECTION

Inspect the linkage pivot bushings and collars for score marks, scratches, or excessive or abnormal wear.
Check the dust seals for wear or damage.

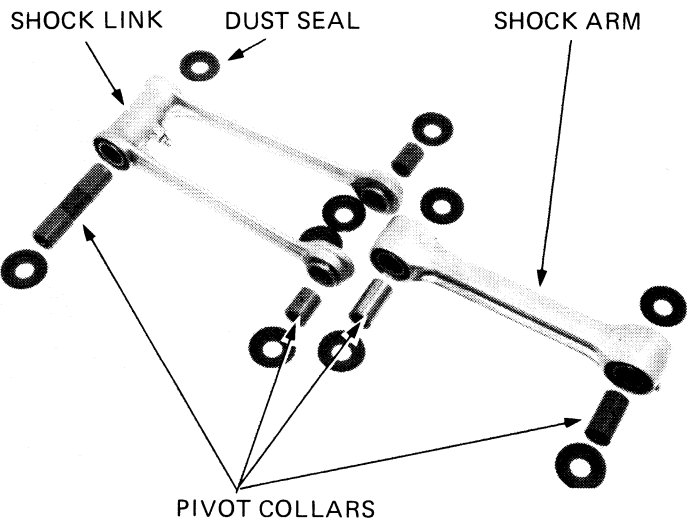


INSTALLATION

Apply molybdenum disulfide grease to the pivot bushings and collars.
Install the shock link to the frame and tighten the pivot bolt.

TORQUE: 70–80 N·m
(7.0–8.0 kg-m, 51–58 ft-lb)

SHOCK LINK PIVOT BOLT

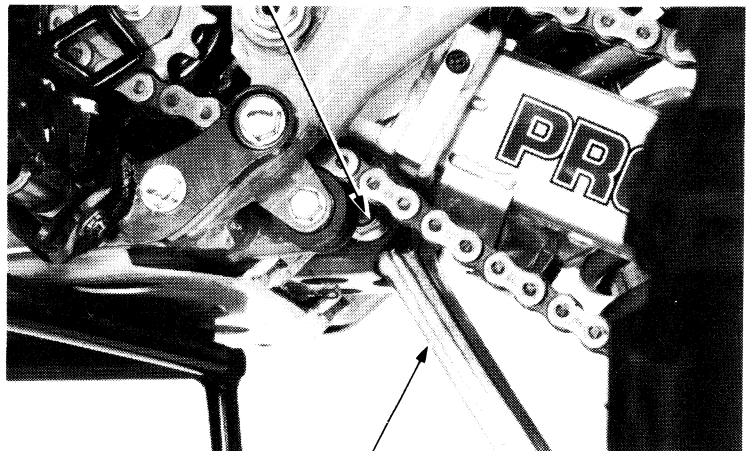

SHOCK LINK