


## HYDRAULIC DISC BRAKES

### BRAKE FLUID FILLING/BLEEDING

Fill the reservoir with DOT-3 or 4 brake fluid from a sealed container.

#### CAUTION

*Do not mix different types of fluid. They are not compatible.*

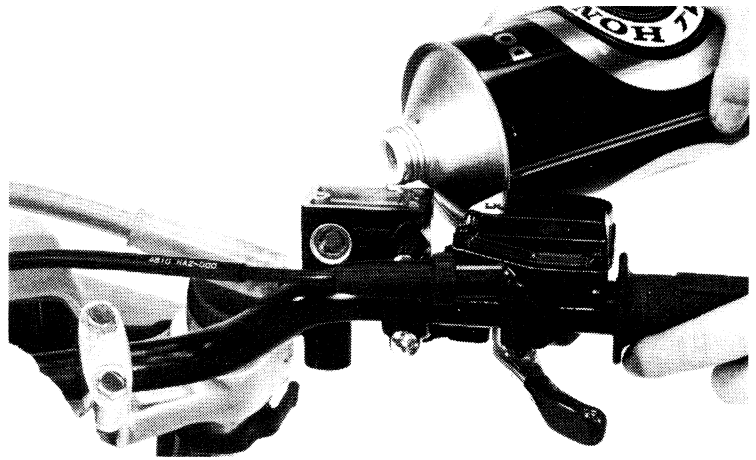


Connect the commercially available brake bleeder to the bleed valve.

Pump the brake bleeder and loosen the bleed valve. Add fluid when the fluid level in the master cylinder reservoir is low.

#### NOTES

- Check the fluid level often while bleeding the brakes to prevent air from being pumped into the system.
- When using a brake bleeding tool, follow the manufacturer's operating instructions.

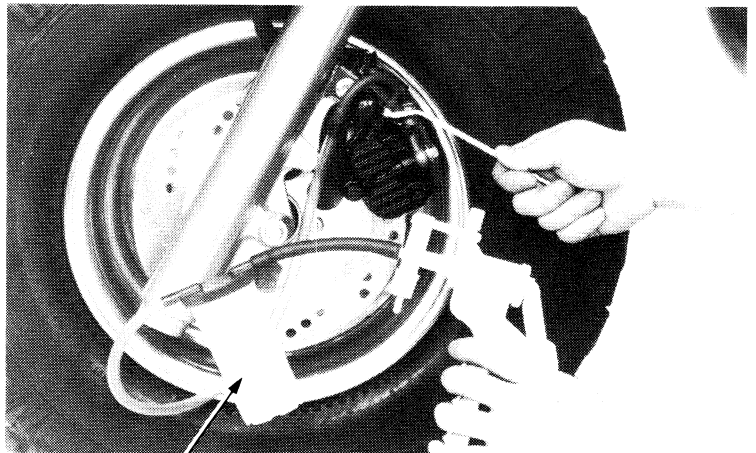

MITYVAC BRAKE BLEEDER  
OR EQUIVALENT

Repeat the above procedures until air bubbles do not appear in the plastic hose.

#### NOTE

If air is entering the bleeder from around the bleed valve threads, seal the threads with teflon tape.

Close the bleed valve and operate the brake lever or pedal. If it feels spongy, bleed the system by performing the procedure.

If a brake bleeder is not available use the following procedure:  
Pump up the system pressure with the lever (or pedal) until there are no air bubbles in the fluid flowing out of the reservoir small hole and lever resistance is felt.

