


HYDRAULIC DISC BRAKES

Push the dust and piston seals in and lift them out.
Clean the seal grooves with clean brake fluid.

CAUTION

Be careful not to damage the piston sliding surfaces.

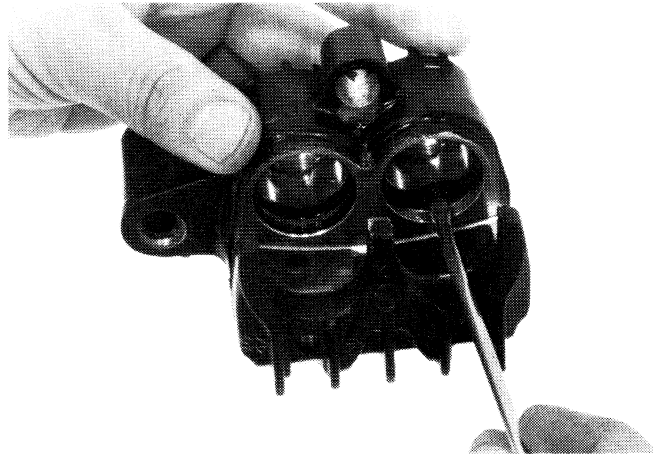


INSPECTION

Check the caliper cylinders and pistons for scratches, scoring or other damage.

Measure the cylinder inside diameter and piston outside diameter.

SERVICE LIMITS:

CYLINDER I.D.: 25.46 mm (1.002 in)
PISTON O.D.: 25.30 mm (0.996 in)

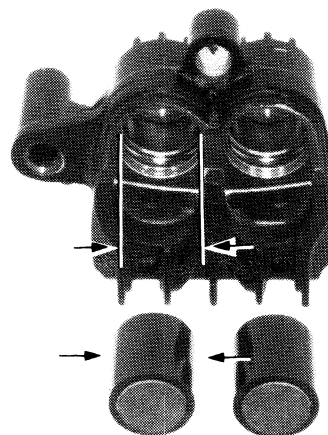

ASSEMBLY

Coat new dust and piston seals with clean brake fluid and install them in the seal grooves in the caliper.

Lubricate the caliper cylinders and pistons with clean brake fluid and install the pistons into the caliper cylinders with the piston pad end facing the pad side.

Apply silicone grease to the pivot collar and boots and install the boots making sure that the boots are seated in the caliper grooves properly.

Install the pad spring.

