


HYDRAULIC DISC BRAKES

DISASSEMBLY

Remove the following:


- pad pin bolts and pads from the caliper.
- pad spring and shim.
- caliper pivot collar and boots.

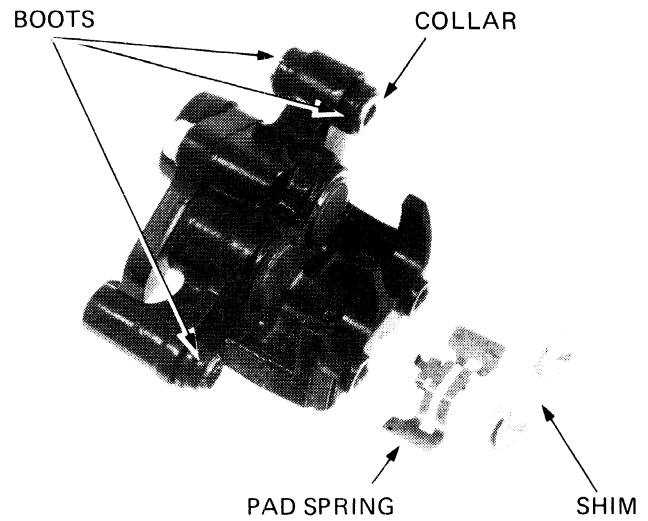

Position the caliper with the pistons down and apply small squirts of air pressure to the fluid inlet to remove the pistons.

WARNING

- *Do not use high pressure air or bring the nozzle too close to the inlet.*
- *Place a shop towel over the piston to prevent the pistons from becoming a projectile.*

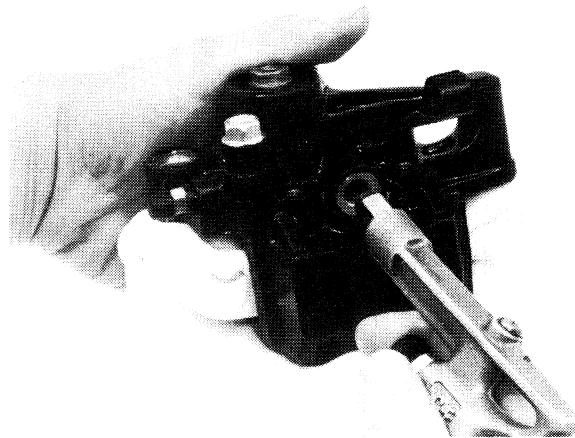

Push the dust and piston seals in and lift them out. Clean the seal grooves with clean brake fluid.

CAUTION

- *Be careful not to damage the piston sliding surfaces.*

