

## REAR FENDER/SEAT/EXHAUST SYSTEM

### REMOVAL

Release the seat lock by moving the lever in the direction shown and remove the seat and rear fender.



### INSTALLATION

Apply grease to the seat catch.  
Install the seat and fender in the reverse order of removal.

## EXHAUST SYSTEM

### WARNING

*Do not service the exhaust chamber or muffler while they are hot.*

