


## ELECTRICAL SYSTEM

Disconnect the headlight coupler and remove the dust cover from the headlight.  
Release the retaining clip and remove the headlight bulb.  
Replace the faulty bulb with a new one.  
Install the removed parts in the reverse order of removal.

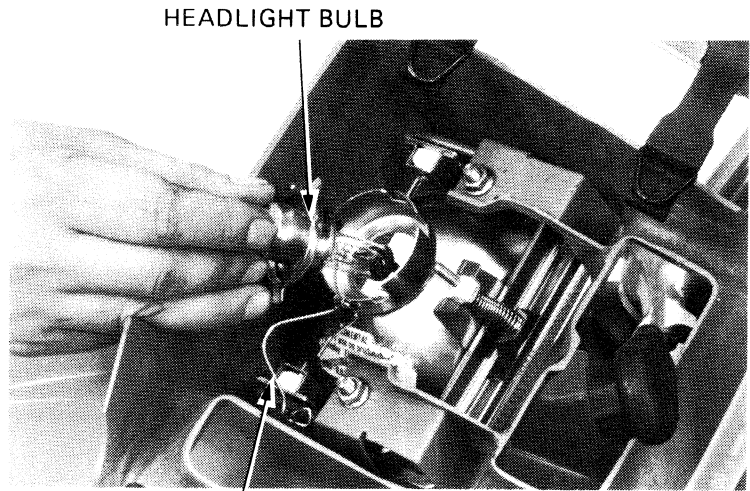

HEADLIGHT BULB


RETAINING CLIP

### TAILLIGHT BULB REPLACEMENT

Remove the taillight lens by removing the two screws and nuts.  
Remove the taillight bulb by pushing it in and turning it counterclockwise.  
Replace the faulty bulb with a new one.  
Install the removed parts in the reverse order of removal.

#### NOTES

- Make sure that the taillight lens rubber seal is in good condition.
- Be sure to install the washers on both side of the rubber mount.

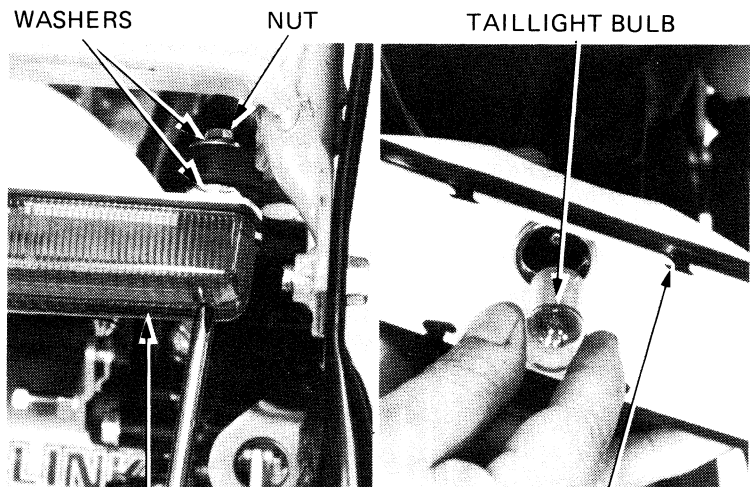

TAILLIGHT LENS


RUBBER SEAL

### LIGHTING COIL INSPECTION

Remove the fuel tank (Page 3-3).  
Disconnect the lighting coil wire connector.  
Measure the lighting coil resistance between the wire terminal and ground.

**LIGHTING COIL RESISTANCE: 0.1–1.0  $\Omega$**

For lighting coil replacement, refer to section 6.

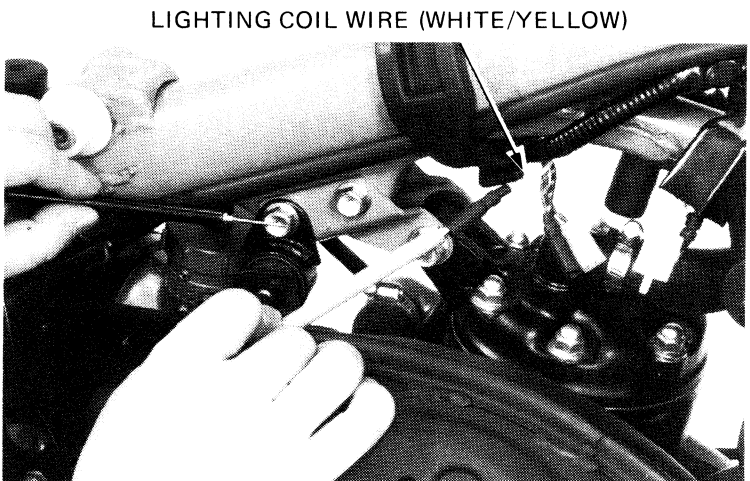

LIGHTING COIL WIRE (WHITE/YELLOW)