


# SWITCHES

**NOTE:**


Engine stop switch, lighting switch and dimmer switch must be replaced as an assembly.

Remove the headlight case and disconnect the engine stop switch/lighting switch wire coupler and connector.

Continuity should exist between the color coded wires in each chart.

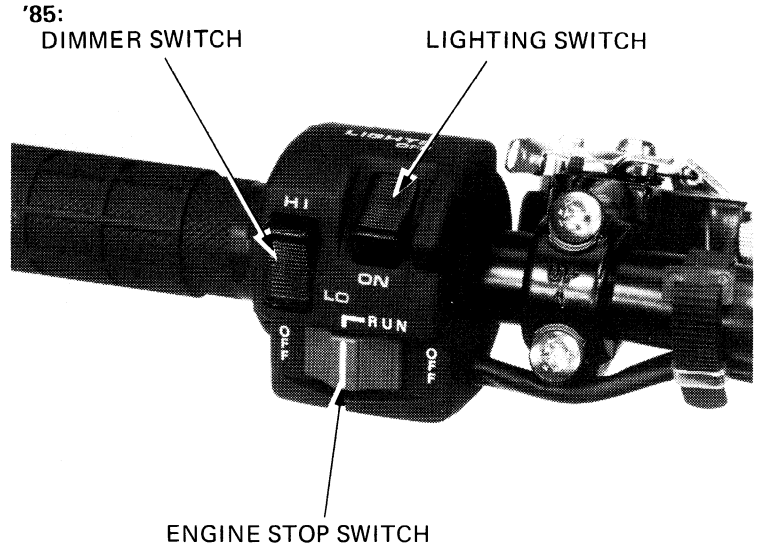

**AFTER '85:**

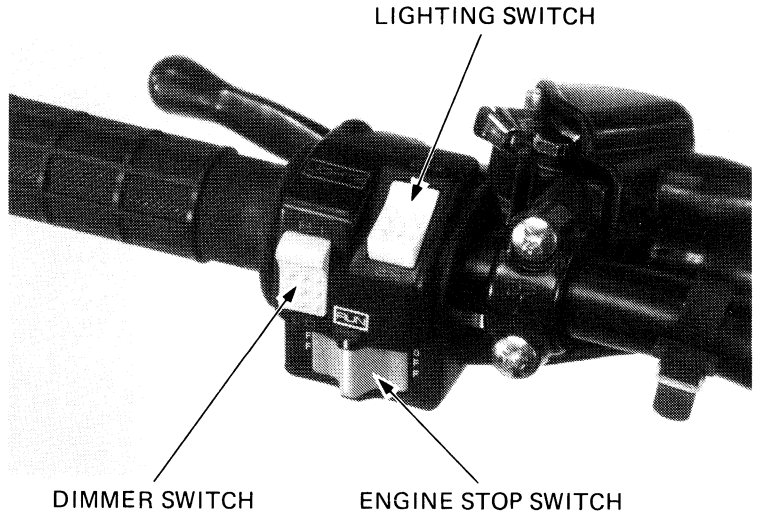

**ENGINE STOP SWITCH**

COLOR CODE	BLACK/ WHITE	GREEN
SWITCH POSITION		
OFF	○	○
RUN		

**LIGHTING SWITCH**

COLOR CODE	WHITE/ YELLOW	BROWN
SWITCH POSITION		
OFF		
ON	○	○

**DIMMER SWITCH**

COLOR CODE	BROWN	BLUE	WHITE
SWITCH POSITION			
HI	○	○	
(N)	○	○	○
Lo	○		○