


CYLINDER REMOVAL


Remove the cylinder head (Section 6).
Remove the gasket, dowel pins and the cam chain guide.

NOTE

Keep the cam chain from falling into the crankcase when removing the cylinder.

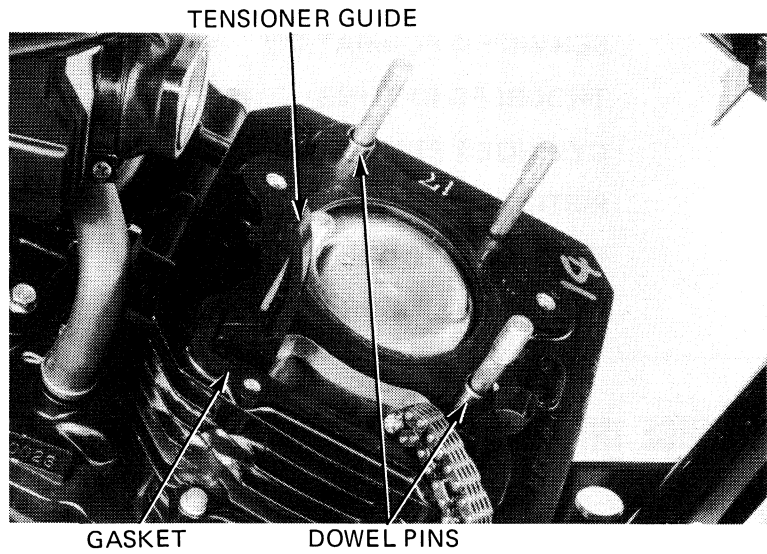

Remove the cylinder mount bolts.

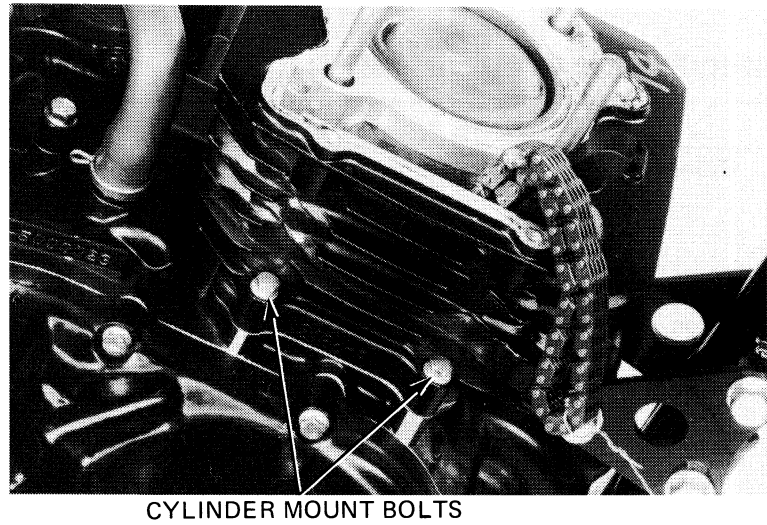

Remove the cylinder.
Remove the gasket and dowel pins.

