



STEERING STEM

REMOVAL

- Remove the following:
- front wheel (Page 11-7)
 - front fender
 - handlebar (Page 11-3)
 - headlight (Page 17-2)

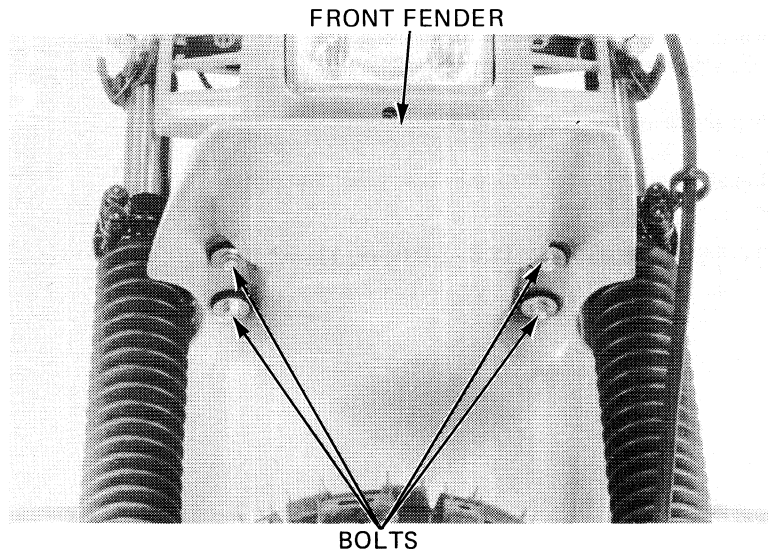

Disconnect all wires and remove the headlight bracket by removing the two bolts.

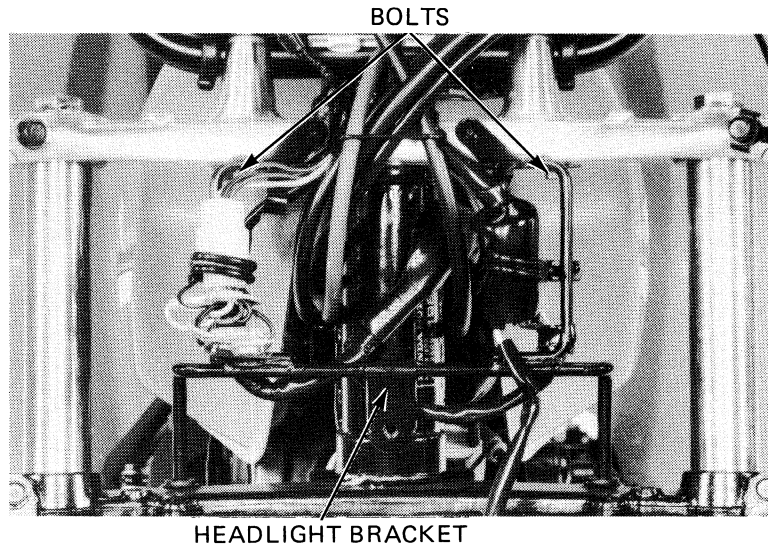

Bend down the steering stem nut lock washer tab.

