



REAR WHEEL/BRAKE/SUSPENSION/FINAL DRIVE

Remove the wheel hub spacer from right end of the axle shaft.

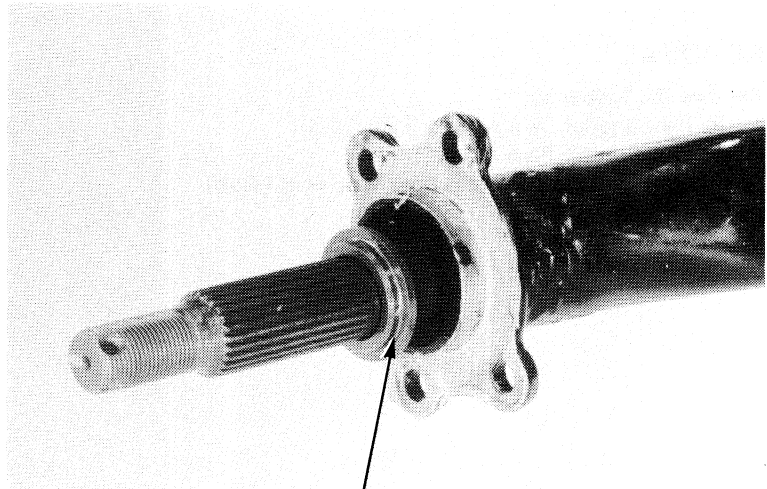

RIGHT WHEEL HUB SPACER


Install the axle nut to the end of the axle and drive out the axle shaft with a plastic hammer.

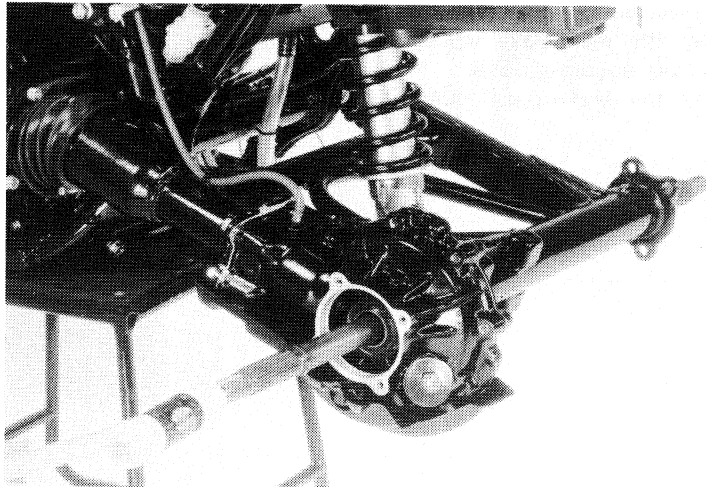

REAR AXLE INSPECTION

Install the wheel hubs onto both end of the axle.
Place the rear axle in V-blocks and measure the runout.

SERVICE LIMIT: 3.0 mm (0.12 in)

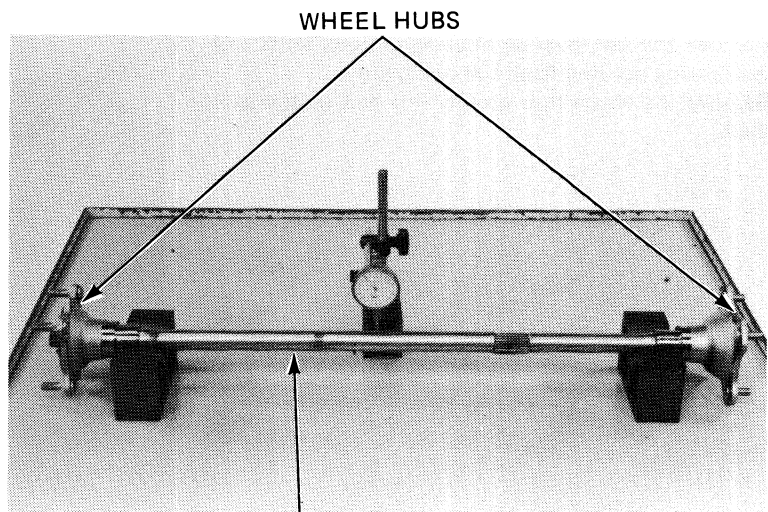

REAR AXLE