

### To Lock the Ignition Switch

- 1 Turn the ignition switch to the OFF or **LOCK** (Lock) position.
- 2 Lock the ignition switch by doing one of the following:
  - Leave the operating range with the Honda SMART Key. **▶P.31**
  - Push the ignition switch.
  - Wait for approximately 20 seconds after turning the ignition switch from ON to OFF or **LOCK** (Lock) position.
  - Switch the Honda SMART Key system to inactive. **▶P.30**
- 3 Make sure that the Honda SMART Key indicator and ignition switch ring go off, the turn signals flash once, and the buzzer rings 1 time. This indicates that the ignition switch is locked.
  - ▶ The buzzer sound can be cancelled. **▶P.36**

When the Honda SMART Key system does not work properly **▶P.107**

### Ignition switch ring

