


Starting the Engine *(Continued)*

If you cannot start the engine:

Open the throttle slightly (about 0.1 in (3 mm), without freeplay).

About 0.1 in (3 mm), without freeplay

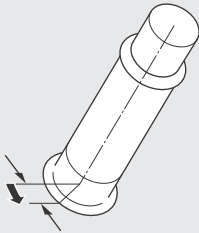

If the engine does not start:

- ① Open the throttle fully and press the start button for 5 seconds.
- ② Repeat the normal starting procedure.
- ③ If the engine starts, open the throttle slightly if idling is unstable.
- ④ If the engine does not start, wait 10 seconds before trying step ① & ② again.

If Engine Will Not Start **➔ P.102**