

# Maintenance

Please read "Importance of Maintenance" and "Maintenance Fundamentals" carefully before attempting any maintenance. Refer to "Specifications" for service data.

<b>Importance of Maintenance</b> .....	P. 55	<b>Crankcase Breather</b> .....	P. 97
<b>Maintenance Schedule</b> .....	P. 57	<b>Other Adjustments</b> .....	P. 98
<b>Maintenance Record</b> .....	P. 60	Adjusting the Headlight Aim .....	P. 98
<b>Maintenance Fundamentals</b> .....	P. 61	<b>Other Replacement</b> .....	P. 99
<b>Tool</b> .....	P. 75	Replacing the Honda SMART Key Battery.....	P. 99
<b>Removing &amp; Installing Body Components</b> ..	P. 76		
Battery .....	P. 76		
Center Cover .....	P. 78		
<b>Spark Plug</b> .....	P. 79		
<b>Engine Oil</b> .....	P. 81		
<b>Air Cleaner</b> .....	P. 84		
<b>Brakes</b> .....	P. 85		
<b>Drive Chain</b> .....	P. 91		
<b>Throttle</b> .....	P. 96		