


Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence. ➔ P. 47
- Check that there is gasoline in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
 - ▶ If the indicator lamp is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate

Check the following items:

- Check the correct engine starting sequence. ➔ P. 47
- Make sure engine stop switch is in the  (Run) position. ➔ P. 26
- Check for a blown fuse. ➔ P. 119
- Check for a loose battery connection (➔ P. 76) or battery terminal corrosion (➔ P. 64).
- Check the condition of the battery. ➔ P. 117

If the problem continues, have your motorcycle inspected by your dealer.