 


## Instruments *(Continued)*

### 1 Clock setting:

- 1 Turn the ignition switch to the ON position.
- 2 With odometer displayed, press and hold the mode button, the hour digits start flashing.
- 3 Press the mode button until the desired hour is displayed.



- 4 Press and hold the mode button, the minute digits start flashing.



- 5 Press the mode button until the desired minute is displayed.



- 6 Press and hold the mode button. The clock is set, and then the display moves to the changing of mileage unit.