

**ABS (Anti-lock Brake System) indicator**


Comes on when the ignition switch is turned to the ON position.  
Goes off when your speed reaches approximately 6 mph (10 km/h).

**If it comes on while riding:** ➔ P.104

**Neutral indicator**

Comes on when the transmission is in Neutral.

**PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)**

Comes on briefly when the ignition switch is turned to the ON position with the engine stop switch in the  (Run) position.

**If it comes on while engine is running:** ➔ P.103