


## Changing Air Cleaner Element

Use a new Honda Genuine air cleaner element or an equivalent specified for your vehicle.

### NOTICE

Using the wrong air cleaner element may cause premature engine wear or performance problems.

1. Remove the rubber guard from the tab.
2. Remove the air cleaner case cover by removing the screws.
3. Remove the air cleaner element.
4. Install the new air cleaner element.
  - ▶ Make sure the air cleaner element is installed securely.

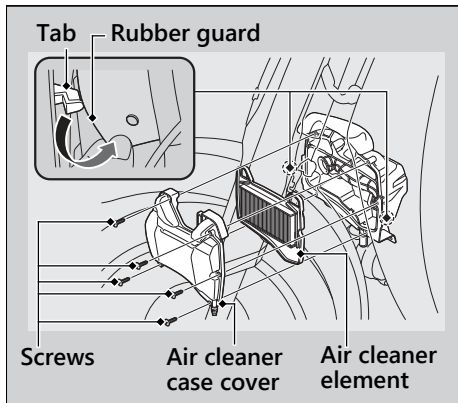

5. Install the parts in the reverse order of removal.
  - ▶ Make sure the air cleaner case cover is installed securely.

**Torque:** 0.8 lbf·ft (1.1 N·m, 0.1 kgf·m)