

Adjusting the Drive Chain Slack

Adjusting the chain requires special tools. Have the drive chain slack adjusted by your dealer.

1. Shift the transmission to Neutral. Stop the engine.
2. Place your vehicle on its center stand on a firm, level surface.
3. Remove the inspection hole cap. ▣ P. 91
4. Loosen the rear axle nut.
5. Loosen the lock nuts on both sides of the chain adjusting plates.

