


Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” ► P. 66

■ Fuse Box Fuses

1. Remove the center cover. ► P. 78
2. Remove the battery cover. ► P. 76
3. Remove the fuse box cover.
4. Pull the fuses out one by one with the fuse puller in the tool kit and check for a blown fuse. Always replace a blown fuse with a spare fuse of the same rating.
 - Spare fuses are provided near the battery.
5. Reinstall the fuse box cover.
6. Reinstall the battery cover.
7. Reinstall the center cover.

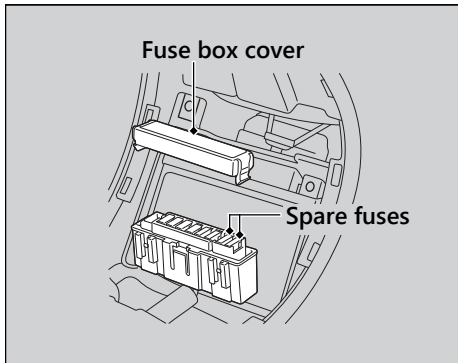

NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your vehicle inspected by your dealer.