


Brakes/Clutch ► Checking the Clutch Fluid


2. **Rear** Inspect the brake pads from the rear right of the motorcycle.

If necessary have the pads replaced by your dealer.

Always replace both left and right brake pads at the same time.

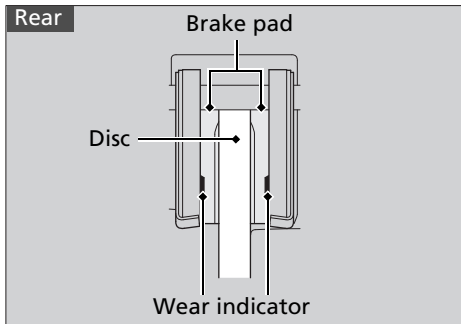

Checking the Clutch Fluid

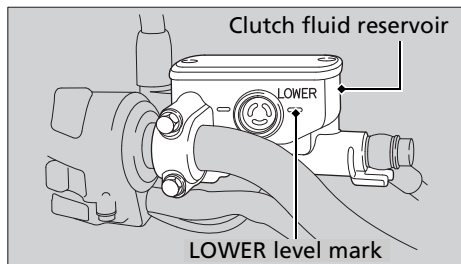

1. Park your motorcycle on its center stand on a firm, level surface.
2. Check that the clutch fluid reservoir cap is horizontal and that the fluid level is above the LOWER level mark.

If the fluid level is low or if you find fluid leaks, or deterioration or cracks in the hoses and fittings, have the clutch system serviced by your dealer.