


## Adjusting the Rear Suspension

### Spring Preload

You can adjust the spring preload by the adjuster to suit the load or the road surface. Use the pin spanner and extension bar to turn the adjuster. Position 1 is for a decreased spring preload (soft), or turn to the position 3 to 5 for a increased spring preload (hard). The standard position is 2.

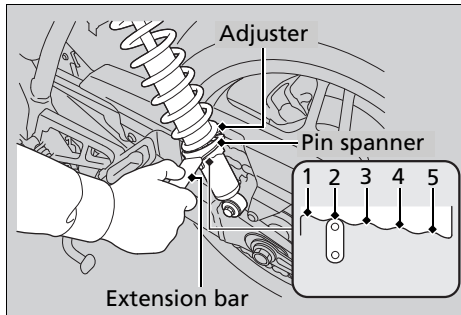

#### NOTICE

Do not turn the adjuster beyond its limits.  
Adjust both left and right shock absorbers to the same spring preload.