

Gear position indicator

The gear position is shown in the gear position indicator.

▶ "—" flashes when the transmission is not shifted properly.

Fuel gauge

Remaining fuel when only 1st (E) segment starts flashing approximately: 0.9 US gal (3.6 L)

At the same time, the available driving distance and remaining fuel displays can be selected. ➔ P.25



If the fuel gauge indicator flashes in a repeat pattern or turns off: ➔ P.95

Display Check

When the ignition switch is turned to the ON position, all the modes and digital segments will show. If any part of these displays does not come on when it should, have your dealer check for problems.