


Instruments *(Continued)*

Display Setting

You can adjust the display settings.

- Clock setting
- Changing of mileage units
- Changing of fuel mileage units

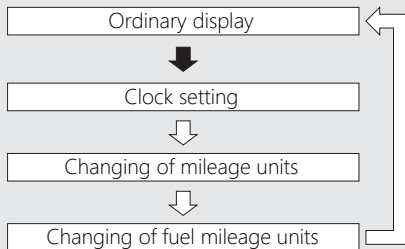

➡ Press and hold A-button and B-button

⇨ Press B-button

In addition, to return to the ordinary display at display setting, turn the ignition switch to the OFF position and then ON position, adjustment will be set.

Adjustment will be cancelled if the button is not pressed for about 30 seconds, unless each display setting was pre-set individually.