

Items		Frequency*1								Regular Replace	Refer to page
		× 1,000 mi	0.6	4	8	12	16	20	24		
		× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4		
Emission-Related Items	Fuel Line	🔧			I		I		I		-
	Throttle Operation	🔧			I		I		I		84
	Air Cleaner *2					I			I		72
	Crankcase Breather *3			C	C	C	C	C	C		85
	Spark Plug				R		R		R		66
	Valve Clearance	🔧				I			I		-
	Engine Oil		R		R		R		R	1 Year	70
	Engine Oil Filter		R				R				70
	Engine Idle Speed	🔧			I		I		I		-
	Secondary Air Supply System	🔧					I				-
	Evaporative Emission Control System*4	🔧					I				-

Maintenance Level

- 🔧 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (▶ P. 128).
- 🔧 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

- I : Inspect (clean, adjust, lubricate, or replace, if necessary)
- L : Lubricate
- R : Replace
- C : Clean