


## Adjusting the Drive Chain Slack

Adjusting the chain requires special tools. Have the drive chain slack adjusted by your dealer.

When adjusting the drive chain slack, be careful not to damage the wheel speed sensor and pulser ring.

### CB1100CA

1. Shift the transmission to Neutral. Stop the engine.
2. Place your motorcycle on its center stand on a firm, level surface.
3. Loosen the rear axle nut.

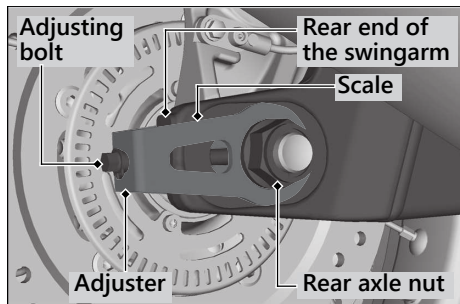

4. Turn both adjusting bolts an equal number of turns until the correct drive chain slack is obtained. Turn the adjusting bolts counterclockwise to tighten the chain, or clockwise to provide more slack. Adjust the chain slack at a point midway between the drive sprocket and the driven sprocket.  
Check the drive chain slack. ► P. 78