

Drive Chain ► Adjusting the Drive Chain Slack

- Check rear axle alignment by making sure the rear end of the swingarm aligns with the corresponding scale on the adjuster. Both left and right swingarm ends should align with the same mark on the corresponding scale. If the axle is misaligned, turn the left or right adjusting bolt until the marks correspond.
- Tighten the rear axle nut.

Torque: 69 lbf·ft (93 N·m, 9.5 kgf·m)

- Tighten the adjusting bolts lightly.
- Recheck drive chain slack.

CB1100NA

- Shift the transmission to Neutral. Stop the engine.
- Place your motorcycle on its center stand on a firm, level surface.
- Loosen the rear axle nut.
- Loosen the lock nuts on both adjusting bolts.

