

Cleaning the Crankcase Breather

1. **Left**
Remove the left side cover. ➤ P. 65
2. Place a suitable container under the crankcase breather tubes.
3. Remove the crankcase breather tube plugs from the tubes.
4. Drain deposits into a suitable container.
5. Install the crankcase breather tube plugs.

