

Troubleshooting

Engine Will Not Start	P. 91	
Overheating (High oil temperature indicator is on)	P. 92	
Warning Indicators On or Flashing	P. 93	
Low Oil Pressure Indicator	P. 93	
PGM-FI (Programmed Fuel Injection)		
Malfunction Indicator Lamp (MIL)	P. 93	
ABS (Anti-lock Brake System) Indicator	P. 94	
Other Warning Indications	P. 95	
Fuel Gauge Failure Indication	P. 95	
Tire Puncture	P. 96	
Electrical Trouble	P. 106	
Battery Goes Dead.....	P. 106	
Burned-out Light Bulb	P. 106	
		Blown Fuse..... P. 109