
#### Tire Puncture ► Removing Wheels

#### Installation

- **1.** Attach the right and left side collars in their original locations on the wheel.
- 2. On the left side, place the wheel between the fork legs and insert the lightly greased front axle shaft to the end, through the left fork leg and wheel hub.
- **3.** Align the end of the front axle shaft with the surface of the fork leg.

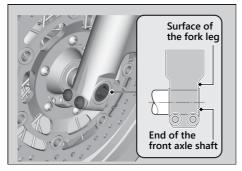

- **4.** Tighten the left axle pinch bolts to hold the axle.
- 5. Tighten the axle bolt.

**Torque:** 44 lbf·ft (59 N·m, 6.0 kgf·m).

- 6. Loosen the left axle pinch bolts.
- 7. Tighten the right axle pinch bolts.

# Torque:

# CB1100CA

19 lbf·ft (26 N·m, 2.7 kgf·m).

### CB1100NA

16 lbf·ft (22 N·m, 2.2 kgf·m).