
- **6.** Remove the brake caliper bracket, rear wheel and side collars.
 - Support the brake caliper assembly so that it doesn't hang from the brake hose. Do not twist the brake hose.
 - Avoid getting grease, oil, or dirt on the disc to pad surfaces.
 - ▶ Do not push the brake pedal while the wheel is removed.

CB1100NA

- 1. Support your motorcycle securely and raise the rear wheel off the ground using the center stand or a hoist.
- Loosen the rear axle nut, lock nuts and turn the adjusting bolts so the rear wheel can be moved all the way forward for maximum drive chain slack.
- 3. Release the rear axle nut/washer.

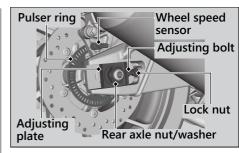

- Remove the drive chain from the driven sprocket by pushing the rear wheel forward.
- **5.** Remove the rear axle shaft and adjusting plates.