

Gauges, Indicators & Displays

11	Anti-lock Brake System (ABS) indicator (amber) (CB1000R ABS)	Lights when there is any abnormality in the Anti-lock Brake System (ABS). Normally, this indicator comes on when the ignition switch is turned ON, and goes off after you ride the motorcycle at a speed above 6 mph (10 km/h). If the indicator comes on while riding, stop the motorcycle in a safe place and turn off the engine. Refer to <i>Anti-lock Brake System (ABS) Indicator</i> , page 66 . For information about Anti-lock Brake System (ABS), see page 65 . <i>Lamp Check</i> .
12	SET button	Use this button for the following purposes: <ul style="list-style-type: none">• To change indication of odometer, tripmeter A, and tripmeter B (page 29)• To select brightness of the display (page 30) .• To adjust time (page 31)• To change unit of the speedometer, odometer and tripmeter (page 34)• To change unit of the temperature meter (page 35)