

# Gauges, Indicators & Displays

## Coolant Temperature Meter

The coolant temperature meter (1) shows the coolant temperature digitally.

### Temperature Display

Below 94 °F (34 °C)	“--” is displayed
Between 95 °F – 250 °F (35 °C – 121 °C)	Actual coolant temperature is displayed.
Between 251 °F – 269 °F (122 °C – 131 °C)	Actual coolant temperature is displayed and flashed.
Above 270 °F (132 °C)	The display remains on and flashes “270 °F (132 °C)”

USA : Fahrenheit (°F), or  
Centigrade (°C).

Canada : Centigrade (°C), or  
Fahrenheit (°F).

< Fahrenheit (°F) >

 95°F

< Centigrade (°C) >

 35°C

(1)

(1) coolant temperature meter