

Is Your Motorcycle Ready to Ride?

*Leaks,
Loose
Parts*

Walk around your motorcycle and look for anything that appears unusual, such as a leak or loose cable.

Lights

Make sure the headlight, position light, brakelight, taillight, license light and turn signals are working properly.

If you are carrying a passenger or cargo, also check the following:

Load Limits

Make sure you do not exceed the load limits (page 49).

Cargo

Check that all cargo is secure.

Adjustments

Adjust the suspension (pages 126, 130) according to your load.