











## Maintenance Schedule

Items	Frequency*1								Refer to page	
	× 1,000 mi	0.6	4	8	12	16	20	24		
	× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4		
Fuel Line				I		I		I	-	
Throttle Operation				I		I		I	78	
Air Cleaner*2					I			I	64	
Crankcase Breather*3			C	C	C	C	C	C	66	
Spark Plug		Every 16,000 mi (25,600 km): I Every 32,000 mi (51,200 km): R								-
Valve Clearance						I			-	
Engine Oil		Initial = 600 mi (1,000 km) or 1 month: R Regular = Every 8,000 mi (12,800 km) or 12 months: R								60
Engine Oil Filter			R		R		R		R	61
Engine Idle Speed			I	I	I	I	I	I	-	
Radiator Coolant*4				I		I		R	67	
Cooling System				I		I		I	-	
Secondary Air Supply System				I		I		I	-	
Evaporative Emission Control System*5					I			I	-	
Drive chain		Every 500 mi (800 km): I L								75

### Maintenance Level

 : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (P. 122).

 : Technical. In the interest of safety, have your motorcycle serviced by your dealer.