

5. Pull out the air cleaner element and check it for any damage.
 - Blow away the remaining dust by applying compressed air from the outside of the air cleaner element.
 - Replace the air cleaner element if it is excessively dirty, torn or damaged.
6. Install the air cleaner element or a new one.
7. Install the parts in the reverse order of removal.

